

Single-core Holder **FX-AT15A**


MJEC-FXAT15A No.0054-87V

1 CAUTIONS

- Make sure to use this product in combination with attachments which are enclosed with a fiber head.
- Be sure to insert a beam-emitting fiber to this product (brown).
- Since this product incorporates a single-core fiber inside the holder, the fiber cannot run through the holder.
- Make sure to cut the fiber first before inserting it to this product.

2 MOUNTING

1. Cut the fiber using the gland and the holder attached to the fiber head. For the details, refer to the Instruction Manual enclosed with the fiber head.
2. After cutting the fiber, loosen the beam-emitting side holder and remove the holder.
3. Insert the tip of the fiber to this product till it stops and tighten the product to the gland.

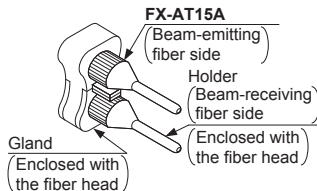

Panasonic Industrial Devices SUNX Co., Ltd.

<http://panasonic.net/id/pidsx/global>

Overseas Sales Division (Head Office)

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan

Phone: +81-568-33-7861 FAX: +81-568-33-8591

For sales network, please visit our website.

PRINTED IN JAPAN

© Panasonic Industrial Devices SUNX Co., Ltd. 2016