



Sensor mounting bracket **MS-GXL15-2**

CMJEC-MSGXL152 No.0055-39V

- When mounting the inductive proximity sensor with the mounting bracket, if the bracket is mounted close to the sensing part, the bracket itself gets sensed and the operation becomes unstable. Make sure to mount such that the mounting holes of the sensor and those of the mounting bracket are in one horizontal straight line.

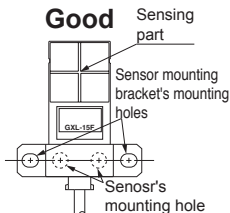

Mount such that the mounting holes of the sensor and those of the mounting bracket are in one horizontal straight line.

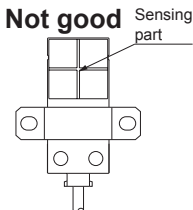

The mounting bracket itself gets sensed and the operation becomes unstable.

Panasonic Industrial Devices SUNX Co., Ltd.

<http://panasonic.net/id/pidsx/global>

Overseas Sales Division (Head Office)

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan

Phone: +81-568-33-7861 FAX: +81-568-33-8591

© Panasonic Industrial Devices SUNX Co., Ltd. 2016

PRINTED IN JAPAN