

Thank you very much for using Panasonic products.

Before using this product, confirm the following contents.

Kindly keep this document in a convenient place for quick reference.

Please read the Instruction Manual of Light Curtain, **SF2B** series carefully and thoroughly for the correct and optimum use of this product.

■ Confirmation of Installation Distance Between Emitter and Receiver of SF2B Series

- When using this product with the **SF2B** series whose installation distance between emitter and receiver is under 1m, confirm with or without an indication of "Version." For confirmation method, refer to "■ How To Confirm With or Without the Indication of "Version.""

- When using this product with the **SF2B** series whose installation distance between emitter and receiver is 1m or more, no need to confirm with or without the indication of "Version."
Prior to the operation, make sure to conduct an inspection by reference to "■ Inspection with Test Rod Before Operation." If there is no error, use this product based on the instruction manual of **SF2B** series.

■ How To Confirm With or Without the Indication of "Version"


- Confirm with or without the indication of "Version" at the name plate on the rear side of the emitter / receiver of **SF2B** series.

With the indication of "Version"

- Prior to the operation, make sure to conduct an inspection by reference to "■ Inspection with Test Rod Before Operation."
- If there is no error, use this product based on the instruction manual of **SF2B** series.

Without the indication of "Version"

- If this product is used with the **SF2B** series whose installation distance between emitter and receiver is under 1m, the test rod in the vicinity of the emitter may not be detected due to the installation condition of the **SF2B** series.
- When conducting the inspection prior to the operation by reference to "■ Inspection with Test Rod Before Operation," inspect carefully around the emitter of **SF2B** series.
- If an error occurs, please contact our office.
- If there is no error, use this product based on the instruction manual of **SF2B** series.

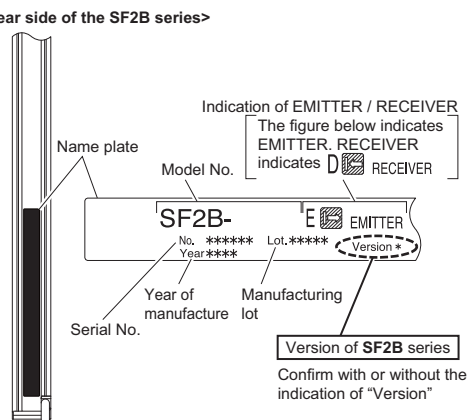


■ Inspection with Test Rod Before Operation

⚠ WARNING

Make sure to conduct the inspection with the test rod prior to the operation. Operating the **SF2B** series without inspection or in an error condition may result in serious injury or death.

<Inspection method>

- The test rod can be detected at three positions, directly in front of the emitter (A), midway between the emitter and the receiver (B), and directly in front of the receiver (C).
- The OSSD indicator (red) on the receiver of **SF2B** series continues to light up as long as the test rod is present in the sensing area from (A) to (C).

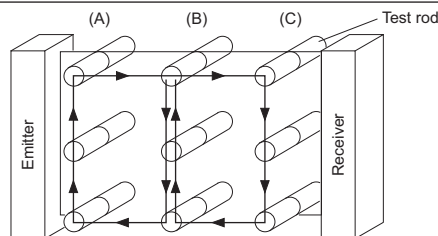

- * In case that the OSSD indicator (green) on the receiver of **SF2B** series lights up even if the beam is interrupted by the test rod during the inspection, check that there is no reflective object in the vicinity of the **SF2B** series. If the OSSD indicator (green) on the receiver of the **SF2B** series still lights up after removing the reflective object, please contact our office.
Be sure to conduct the inspection with test rod as the daily inspection.

Panasonic Electric Works SUNX Co., Ltd.

<http://panasonic-electric-works.net/sunx>

Overseas Sales Division (Head Office)

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan
Phone: +81-568-33-7861 FAX: +81-568-33-8591

Europe Headquarter: Panasonic Electric Works Europe AG

Robert-Koch-Straße 100, 85521 Ottobrunn, Germany
Phone: +49-8024-648-0

US Headquarter: Panasonic Electric Works Corporation of America

629 Central Avenue New Providence, New Jersey 07974 USA
Phone: +1-908-464-3550

PRINTED IN JAPAN

© Panasonic Electric Works SUNX Co., Ltd. 2010