# Panasonic<sup>®</sup>

## **INSTRUCTION MANUAL**

# Ultra High-Speed, High-Accuracy Laser Displacement Sensor **Sensor Head** HL-C201A(E), HL-C201A(E)-MK

M.IF-HI C201A No 0092-46V

Thank you very much for purchasing Panasonic products. Read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for quick reference.

# **⚠ WARNING**

- This product is intended to detect the objects and does not have the control function to ensure safety such as accident prevention
- Do not use the product as a sensing device to protect human body. Be careful not to directly watch or touch the direct laser beam or reflected laser beam.
- The product was developed and manufactured for industrial use.

### **BEFORE USE**

• Before using the product, check the sensor head model and contents of packing.



Check the model name of product at the top of sensor head

Sensor head model

 Packing Check that all of the following components are included in

- the package. 1 sensor head unit
- 1 Instruction manual
- Laser warning labels

[JIS/IEC/KS: 1 set, GB: 1 set (E type only)]

• This product complies with CE Marking when used together with a controller and programmable display unit that are in compliance with CE Marking. Likewise, the product complies with UKCA Marking when used together with a controller and programmable display unit that are in compliance with UKCA Marking.

## 1 DESCRIPTION

- HL-C201A(E), HL-C201A(E)-MK displacement sensor head achieves ultra highspeed and high-accurate measurement using linear image sensor as light receiving element to be used on equipment that require high-speed operation with high-
- The product is used at specular reflection installation

#### **2** CAUTIONS ON HANDLING LASER LIGHT

• In order to prevent the accident by laser product and protect the users, JIS C 6802-2014 "Safety of laser products" was established based on the regulation of IEC (International electrotechnical Commission). This regulation classifies laser products according to the level of hazard, and provides the safety measures for


HL-C201A(E), HL-C201A(E)-MK are classified as "Class 1 laser products" according to IEC 60825-1-2014 (JIS C 6802-2014) "Safety of laser products".

#### Laser hazardous class

Classification according to IEC 60825-1-2014 (JIS C 6802-2014)

,			,
	Class	Model	Description of hazardous evaluation
	Class 1	HL-C201A(E) HL-C201A(E)-MK	Safe under reasonably foreseeable conditions of operation

#### WARNING label

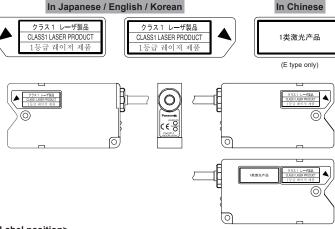

#### <Label position>

- Install the product so the laser beam comes higher or lower than eye level in order not to watch the beam directly during operation.
- Please contact our company if the system breaks down. It is not equipped with a function that stops laser radiation automatically during disassembling the sensor head. The users therefore may be exposed to laser beam in disassembling the sensor head.
- When this product is used in China, affix the Chinese warning label (accessory) on the label in the product.
- Do not use the system in the manner other than specified in this Instruction Manual

#### **3** EXPORT REGULATIONS BY JAPANESE GOVERNMENT

- HL-C201A and HL-C201A-MK are subject to export control regulation by the Foreign Exchange and Foreign Trade Law. Export admission by Japanese government is required before the product is to be exported or brought out of the country. These products are also subject to Article 1.B.3.b.1 of Nuclear Suppliers Group in international export control regime and 2.B.6.b.1 of Wassenaar Arrangement.
- Please follow the export control regulations required. HL-C201AE and HL-C201AE-MK (E type) are not subject to export control regulations under the condition that they are used combined with the non-pertinent controller to export control specified by Foreign Exchange and Foreign Trade Law. When they are combined with the pertinent controller to export control, they are subject to the Law. In this case export admission by Japanese government is re-

quired before the product is to be exported or brought out of the country.

#### 4 SPECIFICATIONS

Model No.		HL-C201A(E)	HL-C201A(E)-MK	
Meas. method		Specular reflection		
Meas	surement center distance	10mm		
Measurement range (Note 2)		±1mm		
Beam source		Red semiconductor laser Class 1 (JIS/IEC/GB/KS) Max output: 0.1mW, Emission Peak wavelength: 658nm		
Beam diameter (Note 3)		Approx. ø20µm	Approx. 20 × 700μm	
Beam receiving element		Linear image sensor		
Reso	olution	0.04μm / average times: 256, 0.01μm /average times: 4,096 [E type (Note 4) 0.25μm / average times 256]		
Linea	arity	±0.02%F.S. [E type (Note 5) ±0.025%F.S.]		
Temperature characteristics		0.01%F.S./°C [E type (Note 5) 0.013%F.S./°C]		
ndicator	Laser emission	Green LED: Lights up during laser emission.		
Indic	Meas. range	Yellow LED: Near measurement center:ON, within measurement range:Blink, beyond the range:OF		
Protective structure		IP67 (except connector)		
Pollution degree		2		
Insulation resistance		20M ohms or more by 500V DC megger (between all the terminals and enclosure.)		
Dielectric withstand	Commercial Frequency	AC 500V for 1min. (between all the terminals and enclosure.)		
Diele	Impulse	±1,000V 1.2/50μs (between all the terminals and enclosure.)		
Vibration resistance		Endurance: 10 to 55Hz (cycle: 1minute), Resistant amplitude of vibration: 1.5mm, if X, Y, and Z directions for 2 hours		
Shock resistance		196m/ s² in X, Y, and Z directions for 3 times		
Ambi	ient illuminance (Note 6)	3,000fx or less (illuminance at beam receiving surface using incandescent lamp)		
Ambient temperature		0 to +45°C (No dew condensation or icing allowed), At storage: -20 to +70°C		
Ambient humidity		35 to 85%RH At storage: 35 to 85%RH		
Ambient Height		2,000m or less		
Material		Main unit case / cover: Die-cast aluminum, Front cover: Glass		
Cable length		0.5m		
Cable extension		Extendible to 30m long maximum using the optional extension cable.		
Weight		Approx. 250g including cable weight		
Applicable Directives / Applicable Regulations		Compliant with EU Law: EMC Directive / British Legislation: EMC Regulation		

- s: 1) Measuring conditions are as follows unless otherwise specified; connection with controller, power voltage:
  24V DC, ambient temperature: 20°C, sampling cycle: 40µs, average times:256, at measurement center distance, measurement subject: aluminum vapor deposition surface reflect ion mirror, and digital measurement
- 2) The measurement range is between +0.1 and +1.0mm (in case the sampling cycle is 20us), or between +0.8
- The measurement range is between +0.1 and +1.0mm (in case the sampling cycle is 20µs), or between +0.8 and +1.0mm (in case the sampling cycle is 10µs).
   The figure shows the value at measurement center distance. It is determined by 1/e² (approximately 13.5%) of center beam intensity. Due to leak light outside the specified area, the reflectance around the dectring point may be higher than at the point and this may affect the measurement value.
   The minimum resolution of 0.25µm can be achieved if the sensor head is connected to the controller that is not subject to "Foreign Exchange and Foreign Trade Law".
   The linearity of 4.0.025%F.S. and temperature characteristics of 0.013%F.S./"C can be achieved if the sensor bend is conpected to the controller that is not twick to "Exception Exchange and Exception Trade Law".

- head is connected to the controller that is not subject to "Foreign Exchange and Foreign Trade Law"

  6) The variation in ambient illuminance is ±0.02%F.S. or less.

### **5 CAUTIONS**


#### Connection

- Turn off the power of controller before connecting or disconnecting the connectors
- When connecting or disconnecting the connectors, be sure to hold the connector area not to apply extra force to the cable.
- Be careful not to touch terminals or to let foreign matter get in the connector after disconnecting connectors.
- · Be careful not to apply force to around the connector of standard cable and extension cable. Do not bend the cables near connectors. Failure to do so causes causes disconnection of the cable.

#### Wiring

- Do not run the sensor cable along (bundled in parallel) with other wirings. Keep it at least 100mm away from other wires. Run the cable so it is separate from high voltage and power circuit lines. If it is necessary to run the cable in parallel with them, shield it by running through a grounded electrical conduit.
- Install the product as far away as possible from noise source such as high-voltage lines, high-voltage device, power lines, power device, machines which generate a large starting and stopping surge, welding machines and inverter motor.
- Do not pull the cable using a force more than 29.4N when routing the cable with the sensor head and controller fixed. At least 20 mm is required from the cable connection to the bend. The bending radius must be 30 mm or more.
- When the sensor head is moved around while in use, the cable in the moving part may be damaged. Therefore, use an extension cable for the moving part and, when the extension cable is damaged, immediately replace it. Otherwise, it may result in failure.

- Use only one extension cable for connection between one sensor head and a controller.
- When the sensor head part is moved around while in use, fix the extension cable at a position 100 mm away from the mobile end.



## Warming up time

• Allow at least 30 minutes of warming up after turning on the power to ensure the performance of the product.

#### Environment

- The life of the semiconductor laser depends on the ambient temperature during use. When using the product near a heat source, take measures to lower the ambient temperature of the sensor head as possible. Mount the sensor on a device having good heat radiation because the sensor itself emits heat.
- Water, oil, or fingerprints on the emitter surface and receiver surface of sensor head reflects light. Dust and dirt on them block light. Keep them clean at all times. When cleaning these parts, wipe them off using a soft lint-free cloth or lens clean-
- Install the sensor head so ambient light such as sunlight or light with the same wavelength as laser beam should not enter the light receiver. If high accuracy is required, install a light shielding plate or the like on the sensor head.
- The controller and connectors are not structurally dustproof, waterproof, or corrosion-resistant. Do not use the product underwater or in the rain.
- Do not use the product in dusty places or that exposed to flammable or corrosive gases, droplet, direct sunlight, severe vibration or impact.

• The product is used at specular reflection installation. Set the "Installation Mode" to Specular Reflection.

Note: The initial values of "Analog Scaling" after initialization is set to the following values when the sensor head is connected to the controller of Version 1.1" or earlier.


Measurement Value A +1.00000(mm), Correction Value a +1.000[V]

Measurement Value B -1.00000(mm), Correction Value b -1.000[V]

The initial values of "Analog Scaling" at initialization is +5.000[V] for Correction Value a and -5.000[V] for Correction Value b -1.000[V]


tion Value b when the sensor head is connected to the controller of Version 1,2\* or late

### 6 MEASUREMENT RANGE / INDICATOR




• The measurement range indicator at sampling cycle of 20µs or 10µs lights up at the center of limited measurement range

# 7 BEAM DIAMETER (Unit: mm)

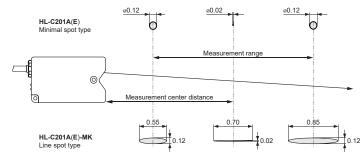

# 8 DIMENSIONS (Unit: mm)

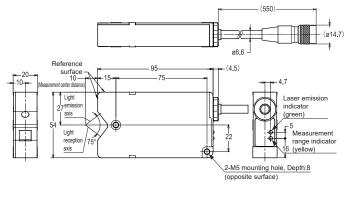

# Panasonic Industry Co., Ltd. Panasonic Industrial Devices SUNX Co., Ltd.

https://panasonic.net/id/pidsx/global Please visit our website for inquiries and about our sales network

Panasonic Industrial Devices SUNX Co., Ltd. 2023

PRINTED IN JAPAN June, 2023