

# Digital Laser Sensor Amplifier LS-501□-C2

ME-LS501C2 No.0090-49V

Thank you very much for purchasing Panasonic products. Please read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for quick reference.

## WARNING

- Never use this product as a sensing device for personnel protection.
- In case of using sensing devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.

## 1 STANDARDS AND REGULATIONS

- This product complies with the following standards and regulations.

### <Conformity Directives / Conforming Regulations>


EU Law:EMC Directive 2014/30/EU

British Legislation:EMC Regulations 2016/1091

### – Applicable Standards

EN IEC 60947-5-2:2020


## 2 PART DESCRIPTION

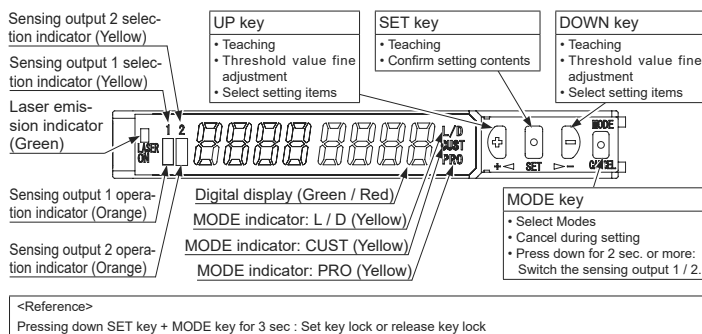

## 3 MOUNTING


### How to connect

1. Fit the rear part of the mounting section of the amplifier on a DIN rail.
2. Press down the rear part of the mounting section of the unit on the DIN rail and fit the front part of the mounting section to the DIN rail.

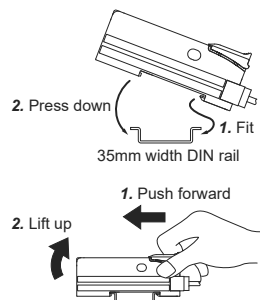

### How to remove

1. Push the controller forward.
2. Lift up the front part of the amplifier to remove it.

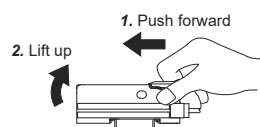


## 4 CONNECTION OF A SENSOR HEAD

Make sure that the power supply is OFF while connecting or disconnecting the sensor head LS-H series (optional).


### How to connect

1. Insert the connector of the sensor head LS-H series (optional) into the connector area for the sensor head of this product as shown in the right figure.
2. Fit the connector cover.

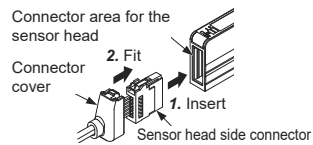

### How to remove

1. Pressing the release lever attached to the connector of the sensor head, pull out the connector.

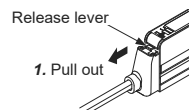


Note: Do not pull by holding the cable without pressing the release lever, as this can cause cable break or connector break.

### <Terminal arrangement>


| Terminal No. | Color code |
|--------------|------------|
| 1            | Purple     |
| 2            | White      |
| 3            | Shield     |
| 4            | Shield     |
| 5            | Black      |
| 6            | Pink       |

## 5 I/O CIRCUIT DIAGRAMS

### <LS-501C2>

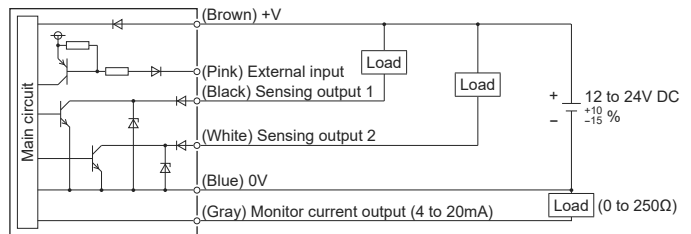


### <LS-501P-C2>

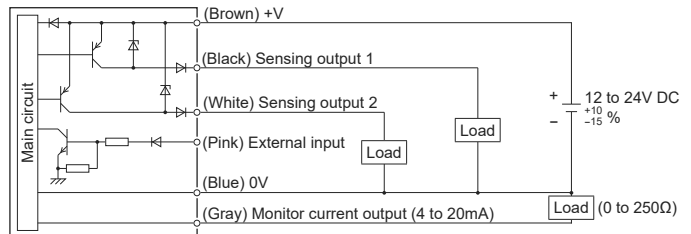

Note: Make sure to insulate the ends of the unused lead wires.

## 6 OPERATION PROCEDURE

- The sensing output can be switched to sensing output 1 or sensing output 2 by holding down the mode key.
- The changed settings are not stored if turning the power OFF while setting. Therefore, confirm the settings by pressing the SET key before turning the power OFF.

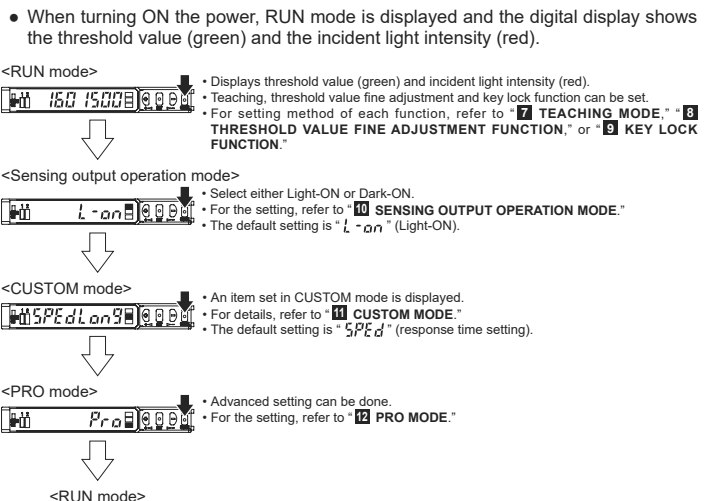

## 7 TEACHING MODE

- Be sure that detection may become unstable depending on the use environment in teaching if less margin is applied.
- When teaching in Window comparator mode or Hysteresis mode, a setting has to be made in PRO mode beforehand.  
In case 1-point teaching, make sure to set the shift amount. (initial value is 10% or 100)  
For the setting, refer to <PRO6> in "8 PRO MODE OPERATION DESCRIPTION."


- Teaching can be set in RUN mode.

### Useful when sensing object can be set

#### 2-point teaching

This is basic teaching method.

##### <Thru-beam type> <Retroreflective type> <Diffuse reflective type>

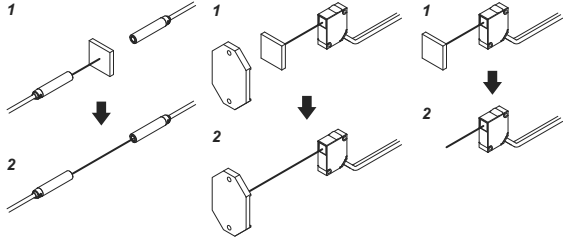

1. Press the SET key in the sensing object present condition.

2. Press the SET key in the sensing object absent condition.

Stable sensing is possible


Stable sensing is not possible

### Useful when sensing object cannot be set

#### Limit-teaching

This is teaching method in case small object or object in back ground are existing.

##### <Thru-beam type and retroreflective type, diffuse reflective type are common>

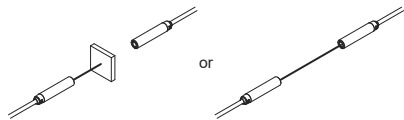

1. Press the SET key in the sensing object present condition or non sensing object present condition.  
2. The threshold level is shifted to high value (low sensitivity) by pressing down UP key. The threshold level is shifted to low value (high sensitivity) by pressing down UP key.

Stable sensing is possible

Stable sensing is not possible


Note: The shift value of approx. 15% is an initial value. Display of the shift value can be changed to percentage [approx. 0 to 999% (unit 1 %)] or incident light intensity [0 to 9999 (unit 1)].  
For setting the shift amount, refer to <PRO1> in "8 PRO MODE OPERATION DESCRIPTION."

### Useful when not want to stop production line and to keep the sensing object move

#### Full-auto teaching

This is method to conduct teaching doing sensing object is moving.

##### <Thru-beam type and retroreflective type, diffuse reflective type are common>

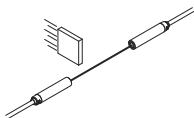

1. Pressing SET key down.

Pressing down long

2. Run the sensing object on the line and hold down the SET key.

3. "Auto" is displayed on the digital display (green) and when the sensing object passed through, release the SET key.


Stable sensing is possible

Stable sensing is not possible


### 1-point teaching (Window comparator mode / Hysteresis mode)

- This is method to set the shift amount to the desired value and to set the threshold range by using the 1-point teaching.

#### <Window comparator mode>

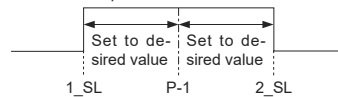

#### <Hysteresis mode>

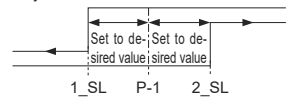

1. Pressing SET key down.

2. Press the SET key down in the sensing object present condition.

3. The threshold value (1\_SL) that is 10% lower from the incident light intensity and the threshold value (2\_SL) that is 10% higher from the incident light intensity are set. (Note 1, 2)

Stable sensing is possible

Stable sensing is not possible

Notes 1) The shift amount of 10% is an initial value. The shift amount can be set in PRO mode. Furthermore, the shift value can be set in incident light amount. For setting method, refer to <PRO6> in "8 PRO MODE OPERATION DESCRIPTION."

2) If the value after setting exceeds the maximum (minimum), the maximum (minimum) sensitivity will be set.


### 2-point teaching (Window comparator mode / Hysteresis mode)

- This is method to set the threshold range by conducting the 2-point teaching (P-1, P-2).
- When conducting teaching, use sensing objects (P-1 and P-2) whose incident light intensities are different from each other.

#### <Window comparator mode>



#### <Hysteresis mode>

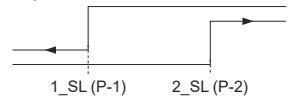

1. Pressing SET key down. (1st time)

2. Press down the SET key in the sensing object present condition. (2nd time)

Stable sensing is possible


Stable sensing is not possible

Note: If the value after setting exceeds the maximum (minimum), the maximum (minimum) sensitivity will be set.


### 3-point teaching (Window comparator mode / Hysteresis mode)

- This is the method to conduct the 3-point teaching (P-1, P-2, P-3) and to set the threshold range by setting the threshold value (1\_SL) of the mid-point between "A" and "B" and the threshold value (2\_SL) of the mid-point between "B" and "C".
- When conducting teaching, use sensing objects (A, B and C) whose incident light intensities are different.
- After teaching, P-1, P-2 and P-3 will be automatically relocated in ascending order: i.e. the lowest value is placed in "A", the second lowest in "B" and the highest in "C".

#### <Window comparator mode>

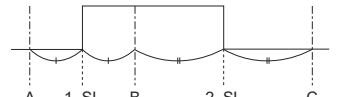

#### <Hysteresis mode>

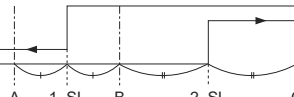

1. Press SET key down in the sensing object present condition. (1st time)

2. Press SET key down in the sensing object present condition. (2nd time)

3. Press SET key down in the sensing object present condition. (3rd time)


Stable sensing is possible

Stable sensing is not possible

Note: If the value after setting exceeds the maximum (minimum), the maximum (minimum) sensitivity will be set.

### Span adjustment in rising differential mode or trailing differential mode


- Move to the rising differential mode, or the trailing differential mode in the PRO6 mode, and press the jog switch to confirm the setting. For the setting procedure, refer to <PRO6> in "8 PRO MODE OPERATION DESCRIPTION."
- The threshold can be set by using the threshold value fine adjustment function. For the threshold value fine adjustment function, refer to "8 THRESHOLD VALUE FINE ADJUSTMENT FUNCTION."

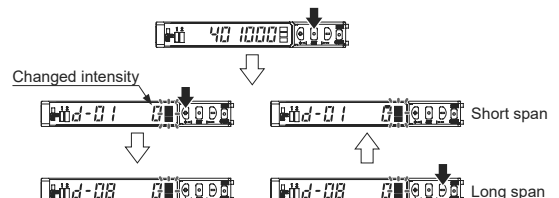

8 THRESHOLD VALUE FINE ADJUSTMENT FUNCTION


- Set the fine adjustment of threshold value in RUN mode.
- Also, the threshold value fine adjustment function can be used in forced ON output mode and forced OFF output mode.
- For setting of the sensing output, refer to <PRO6> in "18 PRO MODE OPERATION DESCRIPTION."

<Normal mode, Rising differential mode or Trailing differential mode>

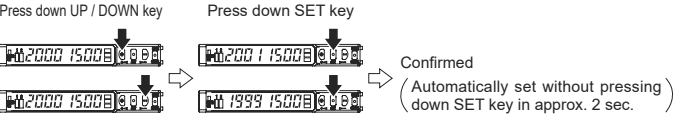

<Window comparator mode or Hysteresis mode>

- When setting sensing output to the window comparator mode or hysteresis mode, "1.5L" and "2.5L" can be changed to another by pressing down SET key for 2 sec.
- In case conducting threshold value fine adjustment of "1.5L" or "2.5L", press down UP key or Down key, and "1.5L" or "2.5L" are displayed. Then, the threshold value fine adjustment can be conducted.

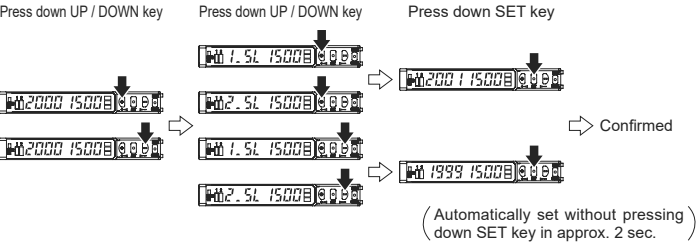


Note: It may not respond when values of "1.5L" and "2.5L" are close because of relation of hysteresis. Be sure to confirm with this device.


9 KEY LOCK FUNCTION

- The key lock function prevents key operations so that the conditions set in each setting mode are not inadvertently changed.
- If operating key switch after key lock is set, "Loc on" is indicated on the digital display.

<Set key lock>

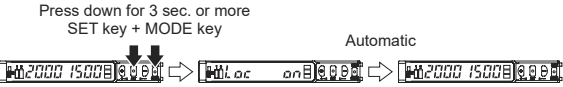


<Release key lock>

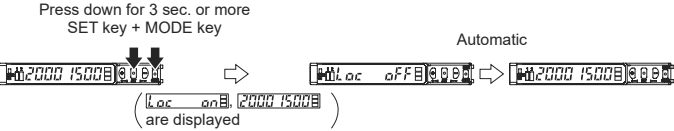


10 SENSING OUTPUT OPERATION MODE

- When MODE indicator: L / D (yellow) lights up, sensing output operation can be set.

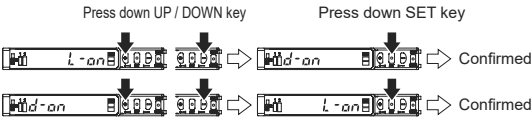

11 CUSTOM MODE


- When MODE indicator: CUST (yellow) lights up, Response time setting, Emission power setting or Hysteresis setting can be displayed.
- For the setting procedure, refer to <PRO5> in "18 PRO MODE OPERATION DESCRIPTION."
- By pressing UP key or DOWN key, the setting in each item will be changed.
- Press SET key to confirm the setting.
- For setting of each item, refer to the following table.

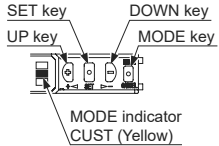


| Item                                | Digital display | Reference item                              |
|-------------------------------------|-----------------|---|
| Response time setting               | SPEDL on 9      | <PRO 1: Response time setting>              |
| Light-receiving sensitivity setting | 9ctL 111111     | <PRO1: Light-receiving sensitivity setting> |
| Emission halt setting               | HERd on         | <PRO1: Emission halt setting>               |
| Data bank loading setting           | chL0 ldc h      | <PRO3: Data bank loading setting>           |
| Code setting                        | 00300030        | <PRO5: Code setting>                        |
| Hysteresis setting                  | HY5H-02         | <PRO 1: Hysteresis setting>                 |

12 PRO MODE

- When MODE indicator: PRO (yellow) lights up, PRO mode can be set.
- For detail of PRO mode, refer to "18 PRO MODE OPERATION DESCRIPTION."

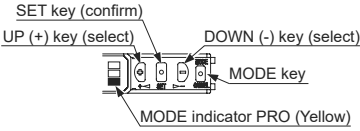


Procedure

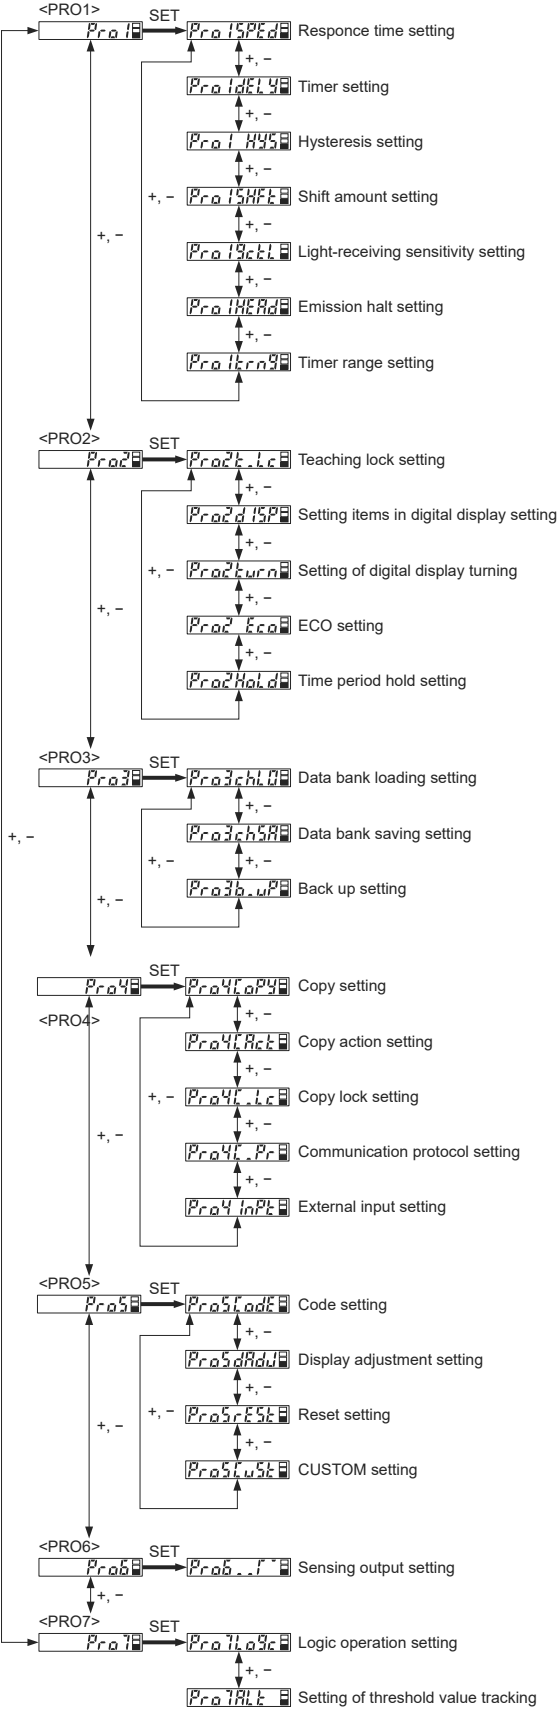


13 OPTICAL COMMUNICATION

- When the setting of data bank loading / saving, copy setting, or copy action setting is conducted via optical communications, cascade the sub amplifiers right side to the main amplifier as follows.  
However, in case using data bank loading / saving, use **LS-501□** or **LS-501□-C2** as main amplifier.
- If an amplifier is under any of the following conditions, the setting of data bank loading / saving, or copy setting cannot be carried out.
  - Copy lock setting is set to copy lock ON " **ℓ . ℓ ℓ on .** "
  - Digital display is blinking
  - External input setting of main amplifier is set to " **ℓ n P ℓ 5 E ℓ F .** " (Only databank loading / saving)
- When communication protocol of a sub amplifier is set to communication emission halt " **ℓ . P r o f f** " the setting of data bank loading / saving, or copy setting cannot be carried out to sub amplifiers subsequent to the mentioned amplifier.
- Make sure to mount closely like follows since interference prevention function is conducted by optical communication.

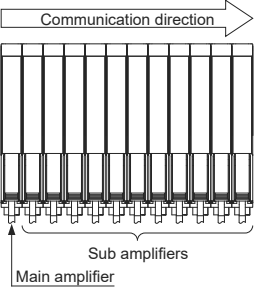

- When this product and other products (e.g. fiber sensor amplifiers, pressure sensor controllers, etc.) are connected together in cascade, install those products so that they are in order of Group A, B, D and C as shown in the right figure. This product is included in Group D.

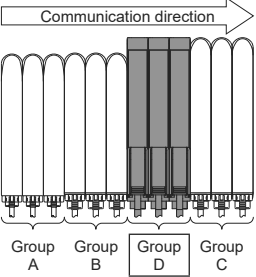

| Group | Model No.  |
|-------|--|
| A     | <b>FX-301□</b> (Conventional version unit)<br><b>FX-301B□/G□/H□, LS-401□</b> |
| B     | <b>FX-301□</b> (Modified version unit)<br><b>FX-305□, FX-301□-C1</b>         |
| C     | <b>LS-403□, DPS</b> series   |
| D     | <b>FX-500</b> series, <b>LS-500</b> series                                   |


- Within each group, identical models should be connected in a lump.
- In case conducting copy setting of this device and other **LS-500** series together, functions which are incorporated in this device will be copied but functions which are not incorporated in this device will not be copied.

14 INTERFERENCE PREVENTION FUNCTION

- Possible number of amplifiers for interference prevention function is different as shown in table below.

| Response time        | H-SP | FAST | STD | LONG | U-LG | HYPR |
|----------------------|------|------|-----|------|------|------|
| Number of amplifiers | 0    | 2    | 4   | 4    | 4    | 4    |

- In case putting in more amplifiers than limit of interference prevention function, put the amplifier protection seal to amplifier which is adjacent of end of an amplifier that the interference function is valid or set OFF in communication protocol setting of the end of amplifier that the interference prevention function is valid.  
**Example: Putting in 12 of this device and set STD of response time setting.**
  - Possible number of interference prevention is 4.
  - Put the amplifier protection seals 4th and 5th amplifiers and between 8th and 9th amplifiers or change the communication protocol setting of 4th and 8th to OFF since interference prevention works from 1st to 4th, from 5th to 8th and 9th to 12th.

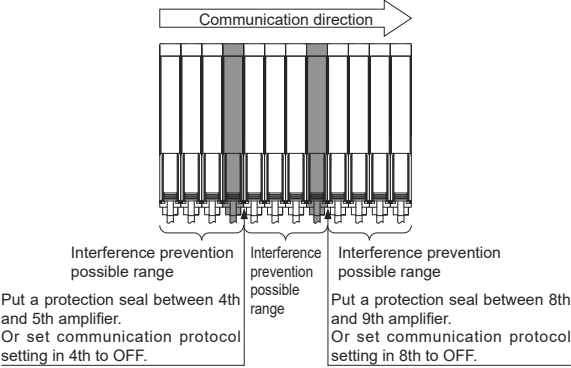

- In case mounting more amplifiers whose response time setting are different, put protection seal between amplifiers that have different response time setting or set communication protocol setting of the upper amplifier to OFF.
- For communication protocol setting procedure, refer to **<PRO4>** in " **18 PRO MODE OPERATION DESCRIPTION.** "

15 ERROR INDICATION

- In case of errors, attempt the following measures.

| Error indication | Description  | Remedy  |
|------------------|--|---|
| <b>Er01</b>      | EEPROM is broken or reached the end of its working life.                         | Please contact our office.  |
| <b>Er02</b>      | EEPROM writing error   |   |
| <b>Er11</b>      | Load of the sensing output 1 is short-circuited causing an over-current to flow. | Turn OFF the power and check the load.  |
| <b>Er12</b>      | Load of the sensing output 2 is short-circuited causing an over-current to flow. |   |
| <b>Er42</b>      | Fault error of sensor head.  | Check the connection of sensor head.<br>If the error persists despite checking the connection, please contact us. |
| <b>Er52</b>      | Communication error when the amplifiers are mounted in cascade.                  | Verify that there is no loose or clearance between amplifiers.  |
| <b>Er53</b>      | Communication error between the upper communication unit and amplifiers.         | Verify that there is no loose or clearance between the upper communication unit and amplifiers.                   |

16 SPECIFICATIONS

| Type                                     | Cable type  |   |
|--|---|---|
|  | NPN output  | PNP output  |
| Model No.                                | <b>LS-501-C2</b>  | <b>LS-501P-C2</b>   |
| Supply voltage                           | 12 to 24V DC $\pm 10\%$ Ripple P-P10% or less   |   |
| Power consumption                        | Normal operation: 1,200mW or less (current consumption 50mA or less at 24V supply voltage)<br>Eco mode: 980mW or less (current consumption 40mA or less at 24V supply voltage)  |   |
| Sensing output<br>(Sensing output 1 / 2) | NPN open-collector transistor <ul style="list-style-type: none"><li>Maximum sink current: 50mA (Note 1)</li><li>Applied voltage: 30V DC or less (Between sensing output and 0V)</li><li>Residual voltage: 2V or less (At 50mA sink current)</li></ul>   | PNP open-collector transistor <ul style="list-style-type: none"><li>Maximum source current: 50mA (Note 1)</li><li>Applied voltage: 30V DC or less (Between sensing output and +V)</li><li>Residual voltage: 2V or less (At 50mA source current)</li></ul> |
|  | Output operation: Switchable either Light-ON or Dark-ON   |   |
| Short-circuit protection                 | Incorporated  |   |
| Response time                            | H-SP: 60μs or less, FAST: 150μs or less, STD: 250μs or less, LONG: 500μs or less<br>U-LG: 5ms or less, HYPR: 24ms or less, Selectable   |   |
| Monitor current output                   | <ul style="list-style-type: none"><li>Output current: approx. 4 to 20mA [Display in H-SP, FAST, STD: 0 to 4,000 (Note 2)]</li><li>Response time: 2ms or less</li><li>Zero-point: Within 4mA <math>\pm 1\%</math>F.S.</li><li>Span: Within 16mA <math>\pm 5\%</math>F.S.</li><li>Linearity: Within <math>\pm 3\%</math>F.S.</li><li>load resistance: 0 to 250Ω</li></ul> |   |
| External input                           | <ul style="list-style-type: none"><li>Signal condition: High: +8V to +V DC or Open Low: 0 to +1.2V DC (at 0.5mA source current)</li><li>Input impedance: Approx. 10kΩ</li></ul>   | <ul style="list-style-type: none"><li>Signal condition: High: +4V to +V DC (at 3mA sink current) Low: 0 to +0.6V DC or Open</li><li>Input impedance: Approx. 10kΩ</li></ul>   |
| Protection                               | IP40 (IEC)  |   |
| Ambient temperature                      | -10 to +55°C (If 4 to 7 units are mounted in cascade: -10 to +50°C or if 8 to 16 units are mounted in cascade: -10 to +45°C) (No dew condensation or icing allowed)   |   |
| Ambient humidity                         | 35 to 85% RH, Storage: 35 to 85% RH   |   |
| Material                                 | Enclosure: Polycarbonate, Key: Polyacetal, Protective cover: Polycarbonate  |   |
| Cable                                    | 0.2mm <sup>2</sup> 6-core cabtyre cable, 2m long  |   |
| Weight<br>(Main body only)               | Approx. 75g   |   |
| Accessory                                | <b>FX-MB1</b> (Amplifier protection seal): 1 set.   |   |


Notes: 1) Excluding power consumption of the monitor current output  
2) If the display adjustment was conducted, it is not in this range.

17 CAUTIONS

- This product has been developed / produced for industrial use only.
- Make sure that the power supply is OFF while adding or removing the amplifiers.
- Take care that if a voltage exceeding the rated range is applied, or if an AC power supply is directly connected, the product may get burnt or be damaged.
- Take care that short-circuit of the load or wrong wiring may burn or damage the product.
- Do not run the wires together with high-voltage lines or power lines, or put them in the same raceway. This can cause malfunction due to induction.
- The specification may not be satisfied in a strong magnetic field.
- Verify that the supply voltage variation is within the rating.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this product, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- The ultra long distance (U-LG, HYPR) mode is more likely to be affected by extraneous noise since the sensitivity of that is higher than the other modes. Make sure to check the environment before use.
- Do not use during the initial transient time (H-SP, FAST, STD: 0.5 sec., LONG, U-LG, HYPR: 1 sec.) after the power supply is switched ON.
- Extension up to total 100m is possible. However, in order to reduce noise, make the wiring as short as possible. When you extend the cable, be sure to use cables which have 0.3mm<sup>2</sup> or more of conductor cross-section area. Set the power supply voltage while taking into account the voltage drop in the power cable due to its resistance.
- Make sure that stress by forcible bend or pulling is not applied to the sensor cable joint.
- This product is suitable for indoor use only.
- Avoid dust, dirt, and steam.
- Take care that the product does not come in contact with oil, grease, organic solvents such as thinner, etc., strong acid or alkaline.
- This product cannot be used in an environment containing inflammable or explosive gasses.
- Never disassemble or modify the product.
- This product adopts EEPROM. Settings cannot be done 100 thousand times or more because of the EEPROM's lifetime.



18 PRO MODE OPERATION DESCRIPTION

Part description

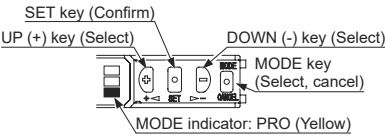




Symbol explanation

SET : Press the SET key  
+,- : Press the UP (+) key or DOWN (-) key.  
Automatic  
---->: Automatically move to next

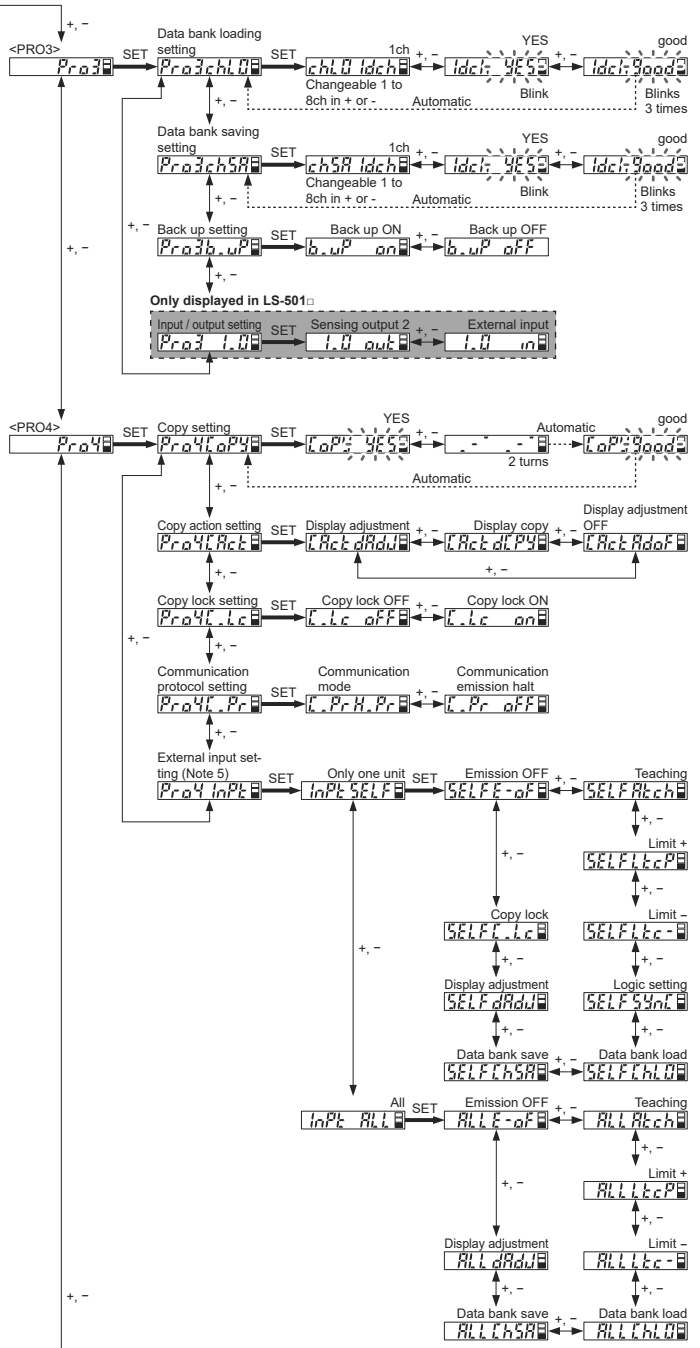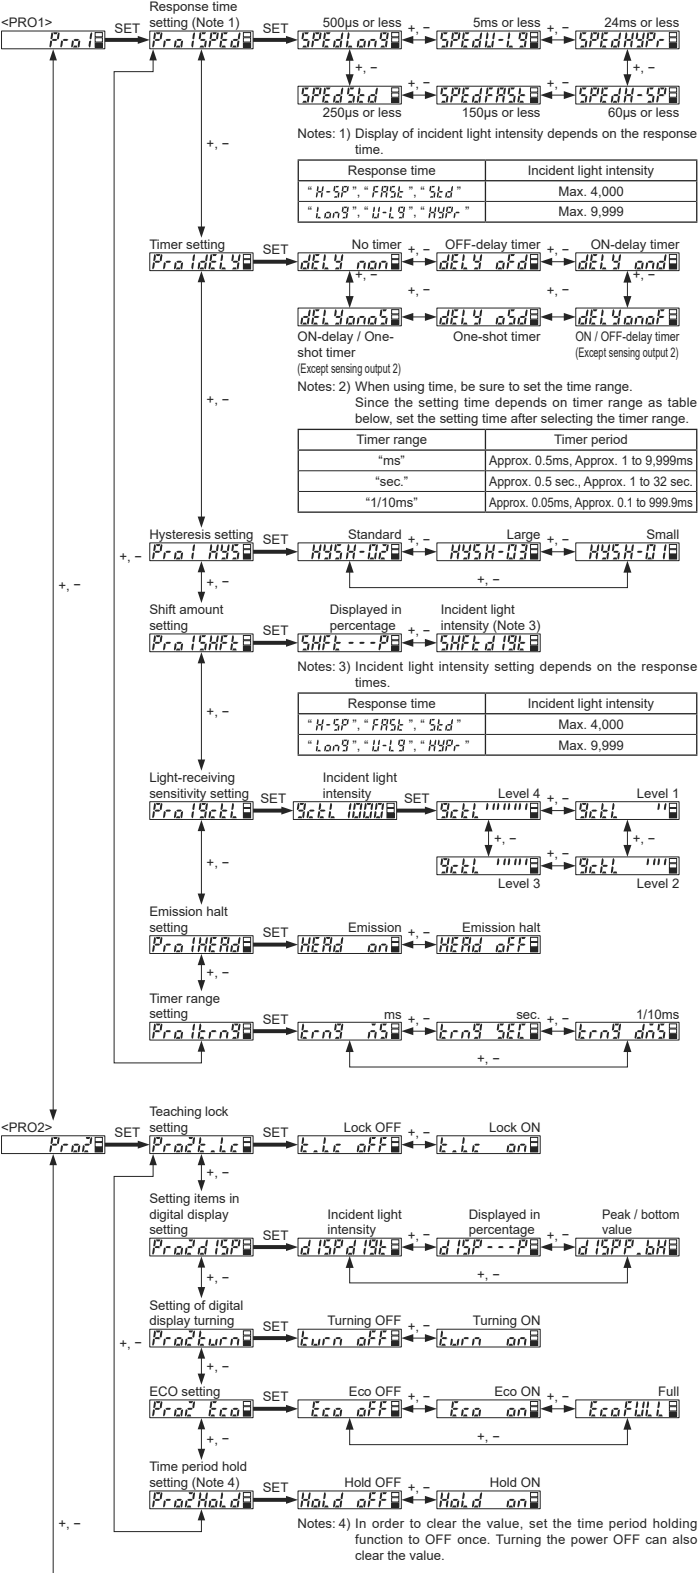

Notes: 5) The signal input time from outside is as follows.

|                             | Input time   |
|-----------------------------|--|
| 2 point teaching            | 20 to under 500ms  |
| Limit teaching              | 20 to under 500ms  |
| Display adjust              | 20 to under 500ms  |
| Full auto teaching          | 600ms or more (sampling during input)  |
| Emission OFF, Logic setting | 2ms or more (conducted during inputting)   |
| Copy lock                   | 2ms or more (conducted during inputting)   |
| Data bank loading           | Input pulse of the specified channel number (1 pulse: 16 to 300ms). However, the pulse cycle is under 500ms. |
| Data bank saving            | Input pulse of the specified channel number (1 pulse: 16 to 300ms). However, the pulse cycle is under 500ms. |

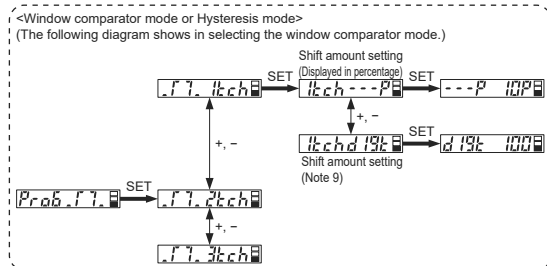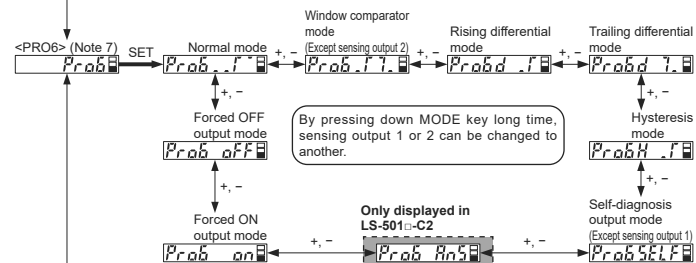
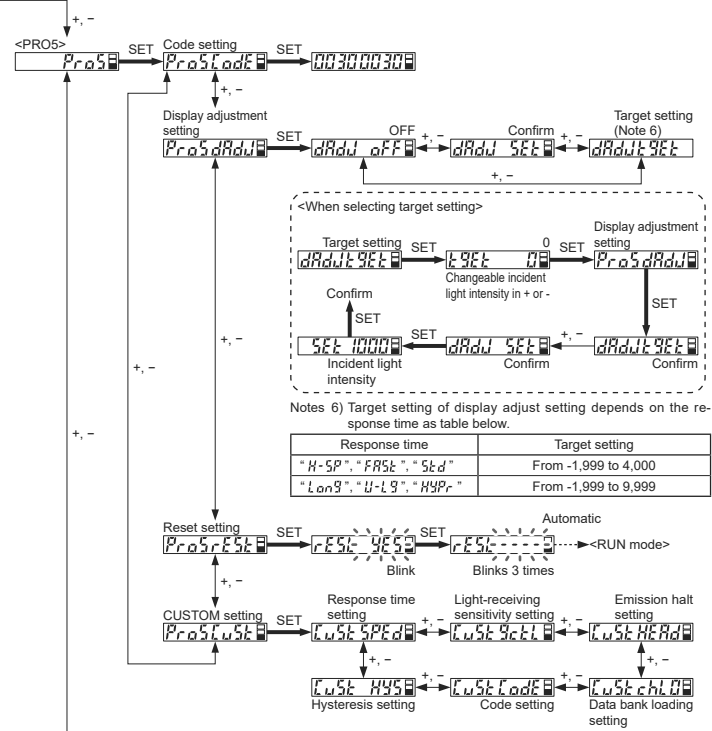


Notes: 7) Set the sensing output setting after input / output setting for LS-501-C2.  
8) After external input, the time given until an answer back output is as follows. However, in case timer of the sensing output 2 is valid, the output time is different from the following table.

|                    | Input time   |
|--------------------|--|
| 2 point teaching   | After 20ms from the input end, the answer back output is read out when result of the teaching is "Good".                           |
| Limit teaching     |  |
| Full auto teaching |  |
| Display adjust     | After 20ms from the input end, the answer back output is read out.   |
| Data bank loading  | After 520ms from rising of last input pulse, the answer back output (pulse) of the number of channel in the data bank is read out. |
| Data bank saving   |  |

9) Incident light intensity depends on the response time as table below.

| Response time          | Incident light intensity |
|------------------------|--------------------------|
| "H-SP", "FRSt", "Std"  | Max. 4,000               |
| "Lan9", "U-L9", "HYPr" | Max. 9,999               |

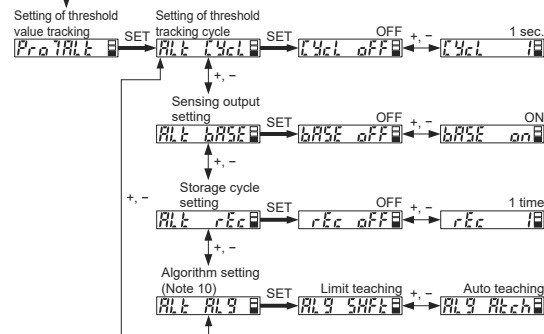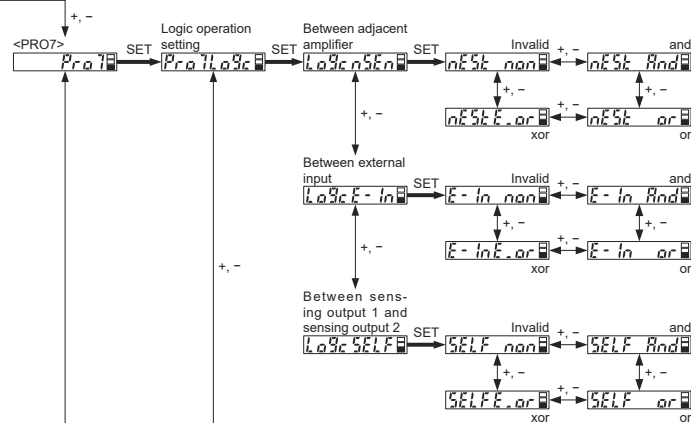

Notes: 10) In case setting to "SHFT", conduct the limit teaching for the changed incident light intensity.  
Shift direction of the threshold differs depending on the combination of the sensing output status and the sensing output operation.

| Sensing output status | Sensing output operation | Shift direction |
|-----------------------|--------------------------|-----------------|
| Sensing output ON     | Light-ON                 | -               |
| Sensing output ON     | Dark-ON                  | +               |
| Sensing output OFF    | Light-ON                 | +               |
| Sensing output OFF    | Dark-ON                  | -               |

<PRO1> **Pr01**

|           | Item                                  | Default setting    | Description   |
|-----------|---------------------------------------|--------------------|---|
| PRO1 mode | Response time setting                 | <i>SPEdLon9</i>    | Set response time.  |
|           | Timer setting                         | <i>dELY non</i>    | Set operation and period of the timer.  |
|           | Hysteresis setting                    | <i>HYSH-02</i>     | Hysteresis can be set when the normal mode or the window comparator mode is selected.   |
|           | Shift amount setting                  | <i>SHFt - - -P</i> | Set shift amount of threshold value in limit teaching.  |
|           | Light-receiving sensitivity setting   | <i>9ctL mmm</i>    | Selects light-receiving sensitivity from 4 levels.<br>* <i>11</i> ": Level 1<br>* <i>mm</i> ": Level 2<br>* <i>mmmm</i> ": Level 3<br>* <i>mmmmmm</i> ": Level 4  |
|           | Emission halt setting                 | <i>HEAd on</i>     | Selects laser emission from the sensor head to execute or halt.   |
|           | Timer range setting                   | <i>trn9 ns</i>     | Change unit time of timer.  |
| PRO2 mode | Teaching lock setting                 | <i>t-Lc oFF</i>    | Be able to prevent from wrong operation of teaching.<br>* <i>oFF</i> ": Teaching mode is valid<br>* <i>on</i> ": Teaching mode is invalid   |
|           | Digital display item setting          | <i>dISPLt9t</i>    | Incident light intensity can be displayed in percentage or the peak / bottom value can be displayed on the digital display (red).   |
|           | Digital display turning on setting    | <i>turn oFF</i>    | Sets the viewing orientation of the digital display.  |
|           | ECO setting                           | <i>Eco oFF</i>     | Power consumption can be lowered.<br>* <i>oFF</i> ": ECO OFF<br>* <i>on</i> ": If any key operation is not carried out for 20 sec. in RUN mode, the digital display turns OFF.<br>* <i>FULL</i> ": If key operation is not done in 20 sec. or setting the key lock function in Run mode, all indicators turns OFF.  |
|           | Period hold setting                   | <i>Hold oFF</i>    | * <i>oFF</i> ": Peak / bottom value in the digital display refreshing condition can be displayed.<br>* <i>on</i> ": Peak / bottom value in the hold condition can be displayed.   |
| PRO3 mode | Data bank loading setting             | <i>chLB ldcH</i>   | Load a setting from specified data bank. (1 to 8 channel)   |
|           | Data bank saving setting              | <i>chSB ldcH</i>   | Save a setting to specified data bank. (1 to 8 channel)   |
|           | Back up setting                       | <i>b.uP on</i>     | Select to save or not to save the threshold value by teaching in EE-PROM.   |
|           | Input / output setting (LS-501□ only) | <i>1.0 out</i>     | Select either sensing output 2 or external output.  |
| PRO4 mode | Copy setting                          | —                  | Using optical communications, be able to copy setting contents in main amplifier to all of the sub amplifiers connected from the main amplifier.<br><b>LS-501□</b> cannot send or receive threshold value when conducting copy.   |
|           | Copy action setting                   | <i>CRct dAdJ</i>   | Copy of items in display adjustment setting and incident light intensity are conducted or canceled by using optical communication. In case incident light intensity does not have enough margin, automatically set optimum value.<br>* <i>dAdJ</i> ": Display adjustment of main amplifier and sub amplifiers can be conducted.<br>Set to the target value of display adjustment in each amplifier.<br>Incident light intensity of main amplifier can be copied to sub amplifier. However, when the difference between main amplifier and sub amplifier is big, it will not be copied.<br>* <i>RdoF</i> ": Display adjust of main and sub amplifier can be set to OFF.<br>Do not press down the SET key many times when display is " <i>RdoF</i> ". When " <i>RdoF</i> " is not displayed in confirmation, also do not press down set key many times.   |
|           | Copy lock setting                     | <i>t-Lc oFF</i>    | When conducting the setting of copy setting or data bank loading / saving from the main amplifier via optical communications, it is possible that only the sub amplifier which is set to copy lock ON " <i>t-Lc on</i> " does not receive the set contents. However, even if copy lock ON " is set, the copy action setting is communicated.  |
|           | Communication protocol setting        | <i>t.PrH.Pr</i>    | When conducting the copy setting or setting of data bank loading / saving from the main amplifier via optical communications, the optical communications through a sub amplifier which is set to communication emission halt " <i>t.Pr oFF</i> " and the following sub amplifiers can be halted.  |
|           | External input setting                | <i>inPt SEtF</i>   | Set external input.   |
|           | Code setting                          | <i>00000030</i>    | Consistent setting can be done by inputting 8-digit code instead of independent setting. In addition, present setting can be confirmed.   |
|           | Display adjustment setting            | <i>dAdJ oFF</i>    | Set incident light intensity to target value. If conducting display adjustment setting when incident light intensity does not have enough margin, " <i>dUEr</i> " is blinked.<br>* <i>oFF</i> ": Display adjustment OFF<br>* <i>SEt</i> ": Slide to (smaller side) incident light intensity from the set of target setting.<br>* <i>t9Et</i> ": Set incident light intensity to value you want (negative side). In case setting to 0-adjustment, set to 0.  |
| PRO5 mode | Reset setting                         | —                  | If setting to " <i>SEt</i> ," returns to default settings (factory settings).   |
|           | CUSTOM setting                        | <i>t.uSEt SPEd</i> | Select an item in CUSTOM mode to display.   |
|           | Sensing output mode                   | <i>ProB..f</i>     | Set sensing output 1 mode and sensing output 2 mode.<br>* <i>..f</i> ": (Normal mode)<br>* Sets a threshold value for ON / OFF operation.<br>* <i>f 7.</i> ": (Window comparator mode) (Except sensing output 2)<br>* Sets two threshold values and judges they are within the required range or not. This can be selected in 1 / 2 / 3-point teaching.<br>* <i>d .f</i> ": (Rising differential mode)<br>* Only drastic rises in incident light intensity are detected.<br>* <i>d 7.</i> ": (Trailing differential mode)<br>* Only drastic drops in incident light intensity are detected.<br>* <i>H .f</i> ": (Hysteresis mode)<br>* Changes hysteresis to ignore small change of incident light intensity.<br>* This can be selected in 1 / 2 / 3-point teaching.<br>* <i>SEtF</i> ": (Self diagnosis output mode) (Except sensing output 1)<br>* Conduct self diagnosis output<br>* <i>RnS</i> ": (Answer back output mode) (Only displayed in <b>LS-501□-C2</b> but except sensing output 1)<br>* Conduct Answer back output toward external input.<br>* <i>on</i> ": (Forced ON output mode)<br>* Sets forcibly the output to ON.<br>* <i>oFF</i> ": (Forced OFF output mode)<br>* Sets forcibly the output to OFF. |

|                                     | Item                      | Default setting  | Description   |                   |                                 |                               |  |  |     |    |     |    |    |    |    |     |    |     |     |    |    |     |    |     |    |    |     |     |     |
|-------------------------------------|---------------------------|--|---|-------------------|---------------------------------|-------------------------------|--|--|-----|----|-----|----|----|----|----|-----|----|-----|-----|----|----|-----|----|-----|----|----|-----|-----|-----|
| PRO7 mode                           | Logical operation setting | Lo9c nSEn  | Select for logical operation and set logical operation methods (and, or, xor).<br>* nSEn": Logical operation is sensing output 1 of this device and conduct logical operation between the sensing output 1 and sensing output 1 of this device.<br>The calculation result of upper amplifiers and this product is output from the sensing output 1 of this product.<br>* E - ln": Logical operation is sensing output 1 of an upper adjacent amplifier and conduct logical operation between the sensing output and sensing output 1 of this device.<br>* SEtF": Logical operation is outer input and conduct logical operation between the output and sensing output 1 of this device. |                   |                                 |                               |  |  |     |    |     |    |    |    |    |     |    |     |     |    |    |     |    |     |    |    |     |     |     |
|                                     |                           |  | <table><tr><th rowspan="2">Logical operation</th><th rowspan="2">Sensing output 1 of this device</th><th colspan="3">Setting of logical operations</th></tr><tr><th>and</th><th>or</th><th>xor</th></tr><tr><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>OFF</td></tr><tr><td>ON</td><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td></tr><tr><td>OFF</td><td>ON</td><td>OFF</td><td>ON</td><td>ON</td></tr><tr><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr></table>  | Logical operation | Sensing output 1 of this device | Setting of logical operations |  |  | and | or | xor | ON | ON | ON | ON | OFF | ON | OFF | OFF | ON | ON | OFF | ON | OFF | ON | ON | OFF | OFF | OFF |
|                                     | Logical operation         | Sensing output 1 of this device  | Setting of logical operations   |                   |                                 |                               |  |  |     |    |     |    |    |    |    |     |    |     |     |    |    |     |    |     |    |    |     |     |     |
|                                     |                           |  | and   | or                | xor                             |                               |  |  |     |    |     |    |    |    |    |     |    |     |     |    |    |     |    |     |    |    |     |     |     |
|                                     | ON                        | ON   | ON  | ON                | OFF                             |                               |  |  |     |    |     |    |    |    |    |     |    |     |     |    |    |     |    |     |    |    |     |     |     |
|                                     | ON                        | OFF  | OFF   | ON                | ON                              |                               |  |  |     |    |     |    |    |    |    |     |    |     |     |    |    |     |    |     |    |    |     |     |     |
| OFF                                 | ON                        | OFF  | ON  | ON                |                                 |                               |  |  |     |    |     |    |    |    |    |     |    |     |     |    |    |     |    |     |    |    |     |     |     |
| OFF                                 | OFF                       | OFF  | OFF   | OFF               |                                 |                               |  |  |     |    |     |    |    |    |    |     |    |     |     |    |    |     |    |     |    |    |     |     |     |
| Setting of threshold value tracking | tYcl oFF                  | This mode can change the threshold value depending on the cycle (1 to 9,999 sec.) that is set with the variations of the incident light intensity. The tracking shift amount is the one which is set at the shift setting. |   |                   |                                 |                               |  |  |     |    |     |    |    |    |    |     |    |     |     |    |    |     |    |     |    |    |     |     |     |
| Sensing output setting              | bRSSE oFF                 | Selects whether tracking threshold when the output is OFF or when the output is ON.  |   |                   |                                 |                               |  |  |     |    |     |    |    |    |    |     |    |     |     |    |    |     |    |     |    |    |     |     |     |
| Storage cycle setting               | rEc oFF                   | Selects a threshold storage cycle in EEPROM from 1 to 250 times.   |   |                   |                                 |                               |  |  |     |    |     |    |    |    |    |     |    |     |     |    |    |     |    |     |    |    |     |     |     |
| Algorithm setting                   | RL9 SHFt                  | When setting to limit teaching, threshold value is followed up on the bases of shift amount. Furthermore, when setting to auto teaching, threshold value be followed up on the bases of each cycle.                        |   |                   |                                 |                               |  |  |     |    |     |    |    |    |    |     |    |     |     |    |    |     |    |     |    |    |     |     |     |

LS-501□ / Code setting table

● Green digital display (right side is the first digit)

| Code | Forth digit                   |                  | Code | Third digit      |                  | Code | Second digit |                | Code                                | First digit |  |
|------|-------------------------------|------------------|------|------------------|------------------|------|--------------|----------------|-------------------------------------|-------------|--|
|      | Sensing output operation mode |                  |      | Timer operation  |                  |      | Timer period | CUSTOM setting |                                     |             |  |
|      | Sensing output 1              | Sensing output 2 |      | Sensing output 1 | Sensing output 2 |      |              |                |                                     |             |  |
| 0    | Light-ON                      | Light-ON         | 0    | No timer         | No timer         | 0    | 0.5ms        | 0              | Response time setting               |             |  |
| 1    | Light-ON                      | Dark-ON          | 1    | OFD              | No timer         | 1    | 1ms          | 1              | Light-receiving sensitivity setting |             |  |
| 2    | Dark-ON                       | Light-ON         | 2    | OND              | No timer         | 2    | 3ms          | 2              | Emission halt setting               |             |  |
| 3    | Dark-ON                       | Dark-ON          | 3    | ONOF             | No timer         | 3    | 5ms          | 3              | Data bank loading setting           |             |  |
| 4    | —                             | —                | 4    | OSD              | No timer         | 4    | 10ms         | 4              | Code setting                        |             |  |
| 5    | —                             | —                | 5    | ONOS             | No timer         | 5    | 30ms         | 5              | Hysteresis setting                  |             |  |
| 6    | —                             | —                | 6    | No timer         | OFD              | 6    | 50ms         | 6              | —                                   |             |  |
| 7    | —                             | —                | 7    | No timer         | OND              | 7    | 100ms        | 7              | —                                   |             |  |
| 8    | —                             | —                | 8    | No timer         | OSD              | 8    | 300ms        | 8              | —                                   |             |  |
| 9    | —                             | —                | 9    | —                | —                | 9    | 500ms        | 9              | —                                   |             |  |
| R    | —                             | —                | R    | —                | —                | R    | 1 sec.       | R              | —                                   |             |  |
| b    | —                             | —                | b    | —                | —                | b    | 2 sec.       | b              | —                                   |             |  |
| c    | —                             | —                | c    | —                | —                | c    | 3 sec.       | c              | —                                   |             |  |
| d    | —                             | —                | d    | —                | —                | d    | 4 sec.       | d              | —                                   |             |  |
| E    | —                             | —                | E    | —                | —                | E    | 5 sec.       | E              | —                                   |             |  |

( OFD: OFF-delay timer, OND: ON-delay timer, ONOF: ON / OFF-delay timer, OSD: One-shot timer )  
( ONOS: ON-delay / One-shot timer )

● Red digital display (right side is the first digit)

| Code     | Forth digit       |                    | Code     | Third digit                              |                 | Code     | Second digit          | Code     | First digit                   |
|----------|-------------------|--------------------|----------|--|-----------------|----------|-----------------------|----------|-------------------------------|
|          | Copy lock setting | Hysteresis setting |          | Setting items in digital display setting | Back up setting |          | Response time setting |          | Sensing output setting (Note) |
|          |                   |                    |          |  |                 |          |                       |          |                               |
| <i>0</i> | Copy lock OFF     | H-02               | <i>0</i> | Incident light intensity                 | Back up ON      | <i>0</i> | H-SP                  | <i>0</i> | Normal mode                   |
| <i>1</i> | Copy lock ON      | H-02               | <i>1</i> | Incident light intensity                 | Back up OFF     | <i>1</i> | FAST                  | <i>1</i> | WC mode                       |
| <i>2</i> | Copy lock OFF     | H-03               | <i>2</i> | Displayed in percentage                  | Back up ON      | <i>2</i> | STD                   | <i>2</i> | Rising differential mode      |
| <i>3</i> | Copy lock ON      | H-03               | <i>3</i> | Displayed in percentage                  | Back up OFF     | <i>3</i> | LONG                  | <i>3</i> | Trailing differential mode    |
| <i>4</i> | Copy lock OFF     | H-01               | <i>4</i> | Peak / bottom value                      | Back up ON      | <i>4</i> | U-LG                  | <i>4</i> | HYS mode                      |
| <i>5</i> | Copy lock ON      | H-01               | <i>5</i> | Peak / bottom value                      | Back up OFF     | <i>5</i> | HYPR                  | <i>5</i> | —                             |

(WC mode: Window comparator mode, HYS mode: Hysteresis mode)

Note: It is a setting only for sensing output 1. Sensing output 2 cannot be set.

● Green digital display (right side is the first digit)

| Code | Forth digit                   |                  | Code | Third digit      |                  | Code | Second digit |   | Code                                | First digit    |  |
|------|-------------------------------|------------------|------|------------------|------------------|------|--------------|---|-------------------------------------|----------------|--|
|      | Sensing output operation mode |                  |      | Timer operation  |                  |      | Timer period |   |                                     | CUSTOM setting |  |
|      | Sensing output 1              | Sensing output 2 |      | Sensing output 1 | Sensing output 2 |      |              |   |                                     |                |  |
| 0    | Light-ON                      | Light-ON         | 0    | No timer         | No timer         | 0    | 0.5ms        | 0 | Response time setting               |                |  |
| 1    | Light-ON                      | Dark-ON          | 1    | OFD              | No timer         | 1    | 1ms          | 1 | Light-receiving sensitivity setting |                |  |
| 2    | Dark-ON                       | Light-ON         | 2    | OND              | No timer         | 2    | 3ms          | 2 | Emission halt setting               |                |  |
| 3    | Dark-ON                       | Dark-ON          | 3    | ONOF             | No timer         | 3    | 5ms          | 3 | Data bank loading setting           |                |  |
| 4    | —                             | —                | 4    | OSD              | No timer         | 4    | 10ms         | 4 | Code setting                        |                |  |
| 5    | —                             | —                | 5    | ONOS             | No timer         | 5    | 30ms         | 5 | Hysteresis setting                  |                |  |
| 6    | —                             | —                | 6    | No timer         | OFD              | 6    | 50ms         | 6 | —                                   |                |  |
| 7    | —                             | —                | 7    | No timer         | OND              | 7    | 100ms        | 7 | —                                   |                |  |
| 8    | —                             | —                | 8    | No timer         | OSD              | 8    | 300ms        | 8 | —                                   |                |  |
| 9    | —                             | —                | 9    | —                | —                | 9    | 500ms        | 9 | —                                   |                |  |
| A    | —                             | —                | A    | —                | —                | A    | 1 sec.       | A | —                                   |                |  |
| B    | —                             | —                | B    | —                | —                | B    | 2 sec.       | B | —                                   |                |  |
| C    | —                             | —                | C    | —                | —                | C    | 3 sec.       | C | —                                   |                |  |
| D    | —                             | —                | D    | —                | —                | D    | 4 sec.       | D | —                                   |                |  |
| E    | —                             | —                | E    | —                | —                | E    | 5 sec.       | E | —                                   |                |  |

( OFD: OFF-delay timer, OND: ON-delay timer, ONOF: ON / OFF-delay timer, OSD: One-shot timer )  
( ONOS: ON-delay / One-shot timer )

● Red digital display (right side is the first digit)

| Code | Forth digit       |                    | Code | Third digit                              |                 | Code | Second digit          |                        | Code                     | First digit                |  |
|------|-------------------|--------------------|------|--|-----------------|------|-----------------------|------------------------|--------------------------|----------------------------|--|
|      | Copy lock setting | Hysteresis setting |      | Setting items in digital display setting | Back up setting |      | Response time setting | Sensing output setting |                          |                            |  |
|      |                   |                    |      |  |                 |      |                       | Sensing output 1       |                          | Sensing output 2           |  |
| 0    | Copy lock OFF     | H-02               | 0    | Incident light intensity                 | Back up ON      | 0    | H-SP                  | 0                      | Normal mode              | Normal output              |  |
| 1    | Copy lock ON      | H-02               | 1    | Incident light intensity                 | Back up OFF     | 1    | FAST                  | 1                      | Normal mode              | Rising differential mode   |  |
| 2    | Copy lock OFF     | H-03               | 2    | Displayed in percentage                  | Back up ON      | 2    | STD                   | 2                      | Normal mode              | Trailing differential mode |  |
| 3    | Copy lock ON      | H-03               | 3    | Displayed in percentage                  | Back up OFF     | 3    | LONG                  | 3                      | Normal mode              | HYS mode                   |  |
| 4    | Copy lock OFF     | H-01               | 4    | Peak / bottom value                      | Back up ON      | 4    | U-LG                  | 4                      | Normal mode              | Self-diagnosis output mode |  |
| 5    | Copy lock ON      | H-01               | 5    | Peak / bottom value                      | Back up OFF     | 5    | HYPR                  | 5                      | Normal mode              | Answer back mode           |  |
| 6    | -                 | -                  | 6    | -  | -               | 6    | -                     | 6                      | WC mode                  | Normal mode                |  |
| 7    | -                 | -                  | 7    | -  | -               | 7    | -                     | 7                      | WC mode                  | HYS mode                   |  |
| 8    | -                 | -                  | 8    | -  | -               | 8    | -                     | 8                      | Rising differential mode | Trailing differential mode |  |
| 9    | -                 | -                  | 9    | -  | -               | 9    | -                     | 9                      | HYS mode                 | Normal mode                |  |

(WC mode: Window comparator mode, HYS mode: Hysteresis mode)